



Monterings- och bruksanvisning | Asennus- ja käyttöohjeet
Mounting and Operating Instructions | Montage- und Bedienungs-
anleitung | Notice de montage | Istruzioni per il montaggio e per l'uso



LK Armatur

www.lkarmatur.se

LK 842

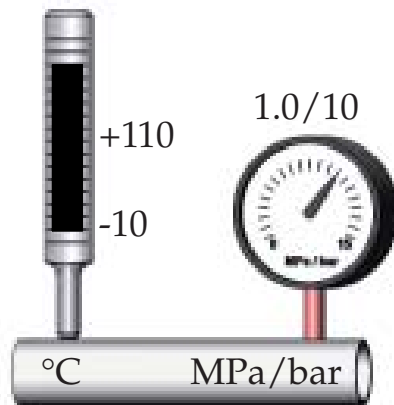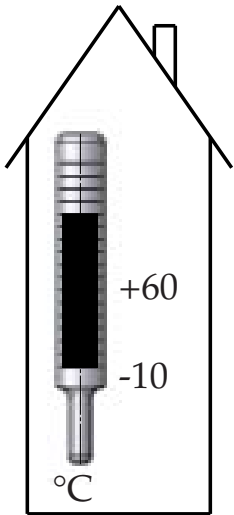


Art. nr: 048959-1



LK Armatur AB

Garnisonsgatan 49 • SE-254 66 Helsingborg • Sweden
Phone: +46 (0)42-16 92 00 • Fax: +46 (0)42-16 92 20
info@lkarmatur.se • www.lkarmatur.se



Shuntventil | Sekoitusventtiili | Mixing Valve |
Mischventil | Vanne mélangeuse | Valvola
miscelatrice

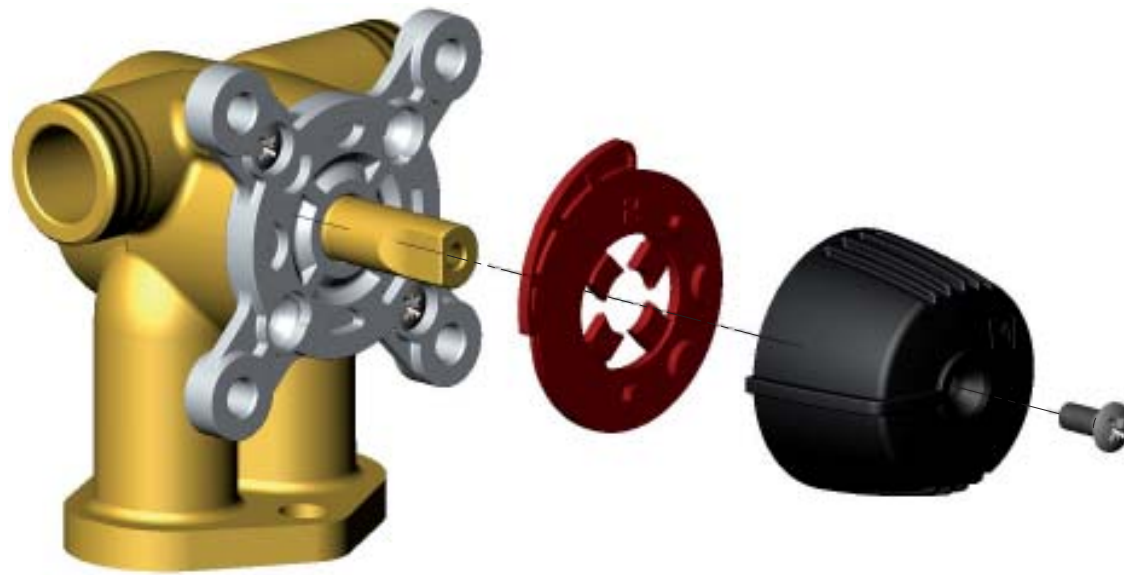

1a

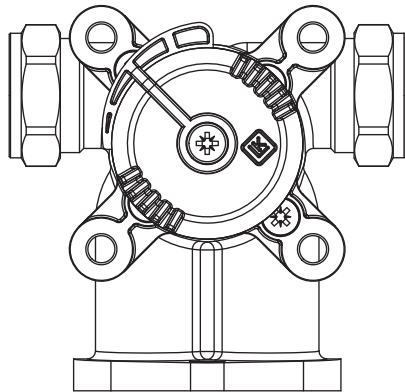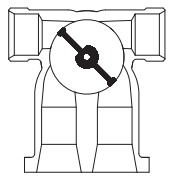

1b

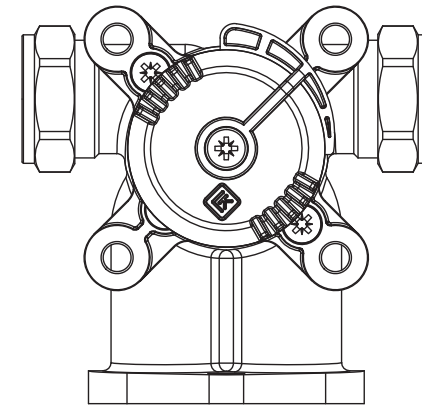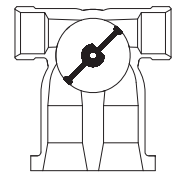

LK Armatur

www.lkarmatur.se